



### **Expandable Arbor:**

Used for holding coil. This arbor expands to the inside diameter of the coil for faster, easier loading. Can accommodate coils with 16" to 20" ID. Capacity is 3,000 lbs. when used with Dual Overhead Reel Stand or Single Free Standing De-Coiler.