
Recommended Placement For Typical Shingled Roofing .

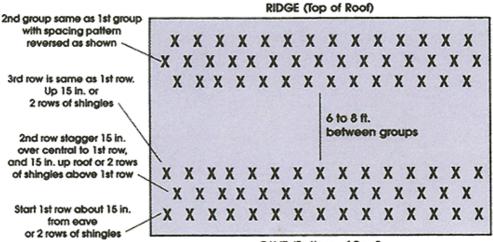

EAVE (Bottom of Roof)